

Cooling Basic Factory Notes

System Drop in Commands into Config

(R10i8s2)

(CC200 S/W Ver 18.05.13)

(cc100 s/w Ver 18.05.13)

(DHW Priority / Back Boiler / Cooling Basic –

All now via purchasable software modules

(Embedded Config (Euro 4) NOT required)

R10i8s2 Replaces, R10i8, R10i8D, R10i8DB, R10DCM

Ver 18.05.13

Compatible with Previous version 18.04.00 (System Compartmentalised) and onward :

- cc200 (Touch Screen sw) and cc100 (PC Application) go together
.dat files have a new arrangement
- cc200 (Touch Screen sw) will work with previous version of Ver 18 stats and I/O Boards

New Features

- Remote Access Now available on this version
- Facility to purchase Encrypted code from CCL to update touch screen with extra software e.g. DHW Priority / Back Boiler / Cooling / Timers / Remote Access / BMS

[illegible]

For Cooling to operate
Relay 8 can only be used as Cooling activation and not a Zone or Heat
Dump

Relay 10 must be used as the boiler Overridden when Cooling in operation
This override of R10 applies to all relay board

I/O #1

Sheet	0	Title	21
Ref	Cooling Basic	Client	Cooling Basic (18.05.13)
Date	05/11/2013	Contact	0

Comments :

Cooling Enable

Operation:	Software Module Missing =	No Cooling operation
	When Purchase :	Cooling (o/p via Relay 8)

System does the following

- a) Displays Min Cooling in Environment
- b) Relay 8 (on I/O 1 only) will run if any zone calling for cooling (SysCL Flag)
- c) Relay 10 -boiler will be overridden (On all I/Os)